


NOTE: NO LATERAL CONNECTIONS SHALL BE PERMITTED DIRECTLY INTO MANHOLES UNLESS INSTALLED IN PRECAST BOTTOMS AND THEN ONLY WITH THE APPROVAL OF THE ENGINEER.

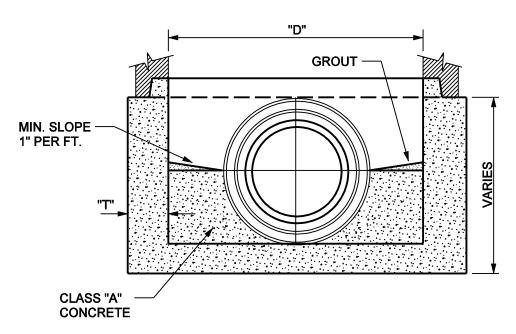

PRECAST BASE SECTION